OTHER INFORMATION





12.1 SAFETY DECALS



General operating instructions for arriving on site, towing and departing.



Warns the operator that 230V equipment is fitted and in use in the cabin. No unqualified or unauthorised personnel are allowed to work on or maintain this equipment



General safety instructions. Roles and responsibilities for hirers and operators.



Affixed to washing facilities to advise the operator that water in these units may not be fit for drinking.



Generator service interval decal.



Emergency Stop button warning - only use in case of genuine emergency.



Indicates location of Emergency Generator Restart Button.



Instructions on how to use an external electrical supply.



Warns of proximity of hot surfaces or exhaust outlets.



Warns user to ensure the hydraulic cylinders are properly supported before being lowered.



Indicates that there is a vent that must not be obstructed.



Advises correct tyre pressure.



Warns of legal obligation not to smoke or vape in the cabin.

ENSURE SPRING BOLT IS SECURING AXLE LOCKING ROD <u>in</u> prior to towing

Warns user to make sure axle rod is locked in place before towing cabin



Advises user how to reset the generator after an alarm.