
TRANSPORTING THE CABIN

12FT & 16FT UNITS



3A

3A.1 PREPARING THE UNIT FOR TOWING - 12FT & 16FT UNITS



IMPORTANT

Before towing, the following steps must be followed:

- All loose items must be stowed prior to towing.
- The 12ft unit is designed to be safe to tow with a full fresh water tank. The fresh water tank of the 16ft unit must be emptied before towing.
- Lock all doors, windows and close and lock the security shutters.
- The Hibernation Switch must be in the OFF position to make sure the external PIR-sensor lights do not activate while on the road causing a hazard.
- Toilet waste tanks must be emptied before towing.
- Empty Waste tank and Drinking Water tank in the Canteen.
- Ensure all umbilical connections are safely disconnected.
- The GVW of the towing vehicle must be no more than 18,000 kg.

CAUTION: The welfare unit is not designed as a payload trailer. Any additional items or material carried in the trailer may exceed its maximum mass. It is the driver's responsibility to ensure this is not the case.



1. Before towing, the waste tank must be emptied by a professional towing company. The cap is found in the toilet floor.



2. In a 16ft cabin, you must empty the fresh water tank before towing. The drain is under the cabin. Unscrew drain nut and allow all water to drain out before replacing and tightening the drain nut.



3. To prepare for towing, first unlock the anti-vandal cover using the key [1]. Remove the key and close the lock seal to prevent water or dirt entry while towing.



4. Raise the anti-vandal cover into the open position then engage the anti-loose fastener and the safety pin to ensure the cover stays in the towing position when on the road.



5. Raise the parking brake lever to engage the brake.



6. Locate the red Hibernation Switch in the exterior wall of the bench near door. Rotate to the ON position to turn cabin electrics on.



7. Remove the remote control from its storage position inside the cabin and connect the remote control's 7 pin plug to the correct socket on the front of the unit.



8. Depending on when your cabin was built, you may have one of three types of remote control. On all types, press the button furthest from the remote wire to lower the ram cylinders and raise the cabin.



9. Keep pressing until the cabin is fully raised and the wheels are clear of the ground.



10. Pull jockey wheel release handle [2] and rotate jockey wheel assembly 90° until the wheel is lowered and the jockey assembly is perpendicular to the floor.



11. Lift the spring bolt into the open position, then push in handle to engage the axle locking mechanism. Then release the spring bolt making sure it covers the washer, to stop the axle locking rod from moving forward.



12. Ensure there are no obstructions beneath the unit. Press the button closest to the pendant wire to retract the rams and lower the unit onto the road wheels and jockey wheel. Make sure rams are fully retracted.



13. Always unplug the remote control unit after use and stow it safely inside the cabin. Turn the Hibernation Switch to the OFF position.



14. Insert the numberplate of the towing vehicle into the numberplate holder clip.

✓ You are now ready to couple your unit to the towing vehicle.



CAUTION

The remote control pendant for the hydraulic rams must ALWAYS be disconnected from the socket when not being used.



CAUTION

Before towing, the Hibernation Switch must be in the OFF position to completely isolate all electrics and make sure the external PIR-sensor lights do not activate while on the road causing a hazard to other drivers.


3A.2A ATTACHING UNIT TO TOWING VEHICLE - BALL HITCH




1. To attach your cabin to a towing vehicle it should be in a raised position with wheels on the floor and rams raised. With the unit positioned on level ground apply the parking brake by raising the lever.




2. Turn the jockey wheel operating handle [1] anti-clockwise to raise the coupling head higher than the towing vehicle's tow ball. Then manoeuvre the towing vehicle so the ball is beneath the ball coupler.

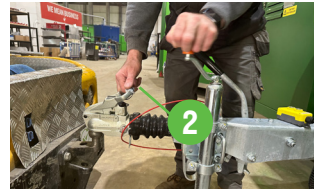

3. Raise and hold the coupling head handle [2] in the up position, and then turn the jockey wheel clockwise to lower the coupling onto the tow ball.

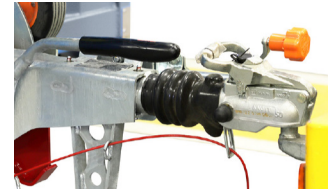

4. When almost fully lowered let go of the coupling head handle and allow it to snap closed over the tow ball. Check that the coupling head is fully engaged on the tow ball.

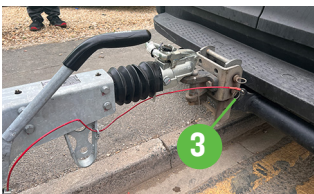

5. Attach the breakaway cable [3] to the tow hitch of the towing vehicle and ensure it is safe and operational.




6. Connect the lighting cable plug to the socket of the towing vehicle and ensure all lights are functioning correctly.



7. Turn orange jockey wheel handle clockwise to raise wheel clear of the ground. Pull jockey wheel release handle [4] to release and rotate jockey wheel assembly 90° until it is raised parallel to the tow bar.



8. Release the unit's parking brake before towing by lowering the lever.

 **Your unit is now attached and ready to be towed.**

3A.2B ATTACHING UNIT TO TOWING VEHICLE - PIN & EYE




1. To attach your cabin to a towing vehicle it should be in a raised position with wheels on the floor and rams raised. With the unit positioned on level ground apply the parking brake by raising the lever.



2. Turn the orange jockey wheel handle to adjust the eye to the right height then manoeuvre the towing vehicle so the eye is aligned with the pin holes on the vehicle tow bar.



3. Insert coupling pin.

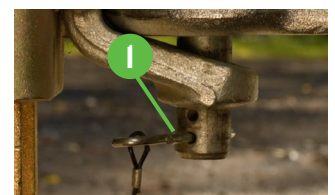

4. Secure with the safety clip [1].



5. Attach the breakaway cable to the tow hitch of the towing vehicle and ensure it is safe and operational.



6. Connect the lighting cable plug to the socket of the towing vehicle and ensure all lights are functioning correctly.



7. Turn orange jockey wheel handle clockwise to raise wheel clear of the ground. Pull jockey wheel release handle [2] to release and rotate jockey wheel assembly 90° until it is raised parallel to the tow bar.



8. Release the unit's parking brake before towing by lowering the lever.

 **Your unit is now attached and ready to be towed.**

3A.3A UNCOUPLING THE UNIT - BALL HITCH



1. Make sure your cabin is situated on firm level ground able to support the weight of the unit. Inspect the ground underneath the unit and check there are no items which may damage the underside of the unit.



2. To uncouple the unit from the towing vehicle, first apply the parking brake.



3. Pull jockey wheel release handle [1] and rotate jockey wheel assembly 90° until the wheel is lowered and the jockey assembly is perpendicular to the floor. Turn orange handle until wheel touches the floor.




4. Disconnect the lighting cable plug from the socket on the towing vehicle.




5. Detach the breakaway cable from the tow hitch of the towing vehicle.




6. Lift the handle behind the tow hitch to release the ball hitch from the towing ball. At the same time turn the jockey wheel handle anti-clockwise to lower the jockey wheel and raise the tow bar.

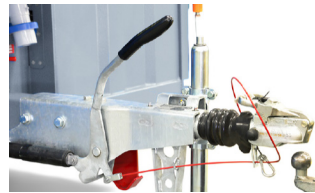

7. Keep turning until the hitch is raised above the ball and the towing vehicle can be removed easily. Remove vehicle.

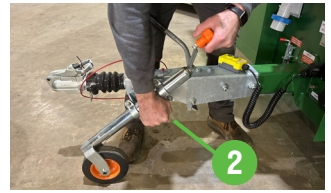

8. Turn orange handle clockwise to raise jockey wheel clear of the ground. Pull handle [2] to release and rotate jockey wheel assembly 90° until the wheel is raised parallel to the tow bar.

 **Your unit is now detached from towing vehicle and ready to use.**


3A.3B UNCOUPLING THE UNIT - PIN & EYE



1. Make sure your cabin is situated on firm level ground able to support the weight of the unit. Inspect the ground underneath the unit and check there are no items which may damage the underside of the unit.




2. To uncouple the unit from the towing vehicle, first apply the parking brake.

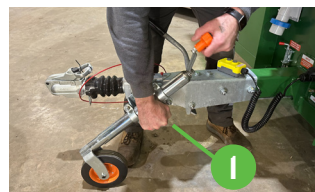


3. Pull jockey wheel release handle [1] and rotate jockey wheel assembly 90° until the wheel is lowered and the jockey assembly is perpendicular to the floor. Turn orange handle until wheel touches the floor.



4. Disconnect the lighting cable plug from the socket on the towing vehicle.

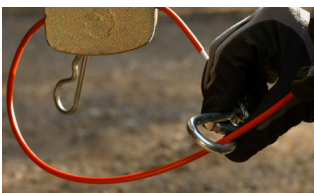


5. Detach the breakaway cable from the tow hitch of the towing vehicle.

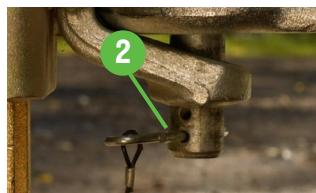


6. Remove the safety clip [2].



7. Remove coupling pin.

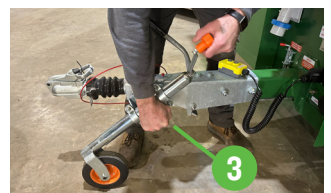

Turn orange jockey wheel handle clockwise to raise wheel clear of ground. Pull handle [3] to release and rotate jockey wheel assembly 90° until the wheel is raised parallel to the tow bar.

 **Your unit is now detached from the towing vehicle and ready to use.**

3A.4 DEPLOYING THE UNIT

IMPORTANT

To ensure the optimum performance of the solar-powered Deep Green cabin, the unit should be parked in an open exposed area with as little shade as possible over the solar panels. Avoid areas under trees, tunnels or close to tall buildings if at all possible.



1. Make sure your cabin is situated on firm level ground able to support the weight of the unit. Inspect the ground underneath the unit and check there are no items which may damage the underside of the unit.



2. Uncouple your vehicle from the towing vehicle as described in manual section 3.3 making sure the cabin parking brake is on. Move the towing vehicle away and park at a safe distance.




3. Rotate red Hibernation Switch to the ON position to turn the cabin electrics on. Depending on model, this switch will either be located inside the bench seat in the Canteen or in the wall beneath the bench seat.



4. Remove the remote control from its storage position inside the cabin and connect the remote control's 7 pin plug to the correct socket on the front of the unit.



5. Press the button furthest from the remote wire to lower the ram cylinders and raise the cabin.

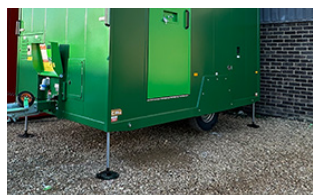

6. Keep pressing until the cabin is fully raised and the wheels are clear of the ground.



7. Find axle rod on front of the cabin. Lift the spring bolt into the open position, then pull out the handle to release the axle locking mechanism. Then release the spring bolt.



8. Ensure there are no obstructions beneath the unit, then press the button closest to the wire on the remote control until the rams have fully retracted and the unit is sitting securely on the ground.




10. Release the unit's parking brake by lowering the lever.



11. Always unplug the remote control unit after use and stow it safely in the cabin.



12. If the cabin is going to be used straight away, you should leave the Hibernation Switch ON. If it will not be used for a while, then turn the Hibernation switch to the OFF position.

 **You are now ready to lower your anti-vandal cover.**



CAUTION

During use, the unit **MUST** be uncoupled from the towing vehicle.



CAUTION

The remote control pendant for the hydraulic rams must **ALWAYS** be disconnected from the socket when not being used.

3A.5 ANTI-VANDAL COVER - FLAP OR COWL

Your welfare unit is protected from theft by an anti-vandal cover with an anti-prise bear-claw lock. Here we show you how to lower your anti-vandal cover into deployed position. To raise it into towing position, just reverse the procedure.



1. Release the anti-loose fastener and safety pin that are holding the cover in position.



2. Gently lower the anti-vandal cover so it covers the electrics. In the case of the cowl, it will cover the whole tow bar.



3. Once in position, lock the cover. Remove the keys and close the lock seal to protect against dirt or damage.

3A.6 USING THE LOW LEVEL LIFTING EYES

! IMPORTANT

Before transporting, the following steps must be followed:

- All loose items must be stowed prior to transporting.
- When transporting on a lorry, the unit is designed to be safe to transport with a full fresh water tank.
- The Hibernation Switch must be in the OFF position to isolate the electrics and make sure the external PIR-sensor lights do not activate while on the road causing a hazard.
- Toilet waste tanks must be emptied before transporting.
- Empty Waste tank and Drinking Water tank in the Canteen.
- Lock all doors, windows and close and lock the security shutters.
- Ensure all umbilical connections are safely disconnected.

CAUTION: The welfare unit is not designed as a payload trailer. Any additional items or material carried in the trailer may exceed its maximum mass. It is the driver's responsibility to ensure this is not the case.

As well as being towed, your mobile welfare unit can also be lifted with a crane and moved around site or lifted onto a lorry for transport. To facilitate this, the unit is equipped with lifting eye holes.

The eye holes are set at a low level which means avoidance of Health & Safety "Working at Height" issues associated with attaching cables to roof-mounted eyes.

Our removable eye system means security is improved as the eyes are not fixed to the units reducing the risk of theft by crane.

Due to the protective solar panel skirts along the top rail of the cabin, it is essential to always use spreader bars when lifting Deep Green cabins using straps or chains so the skirts are not damaged during the lifting process.

To avoid damage to the roof mounted solar panels and protective skirts, the cabin must always be secured to the transport lorry using the low level lifting points rather than lashing over the top.



1. First remove the plugging bolt from the eye hole.



2. Then screw in the lifting eye, ensuring there is a face to face contact between the side of the cabin and the face of the lifting eye.



3. Do this for all four lifting eyes. You are now ready to attach lifting straps or chains.



4. When lifting a Deep Green cabin using straps or chains, spreader bars must always be used to avoid damage to solar panel skirt.



5. When lifting is finished please, remove the eyes, replace the plugs and store the lifting eyes in the unit.

! CAUTION

When lifting a cabin, use **ONLY** the proprietary lifting eyes supplied from Boss Cabins. One eye must be used on each corner of the unit to promote a level lift. To ensure safe lifting, the eyes must be fitted correctly.

! CAUTION

To avoid damage, **ALWAYS** use spreader bars when lifting Deep Green cabins with a crane.

! CAUTION

NEVER secure a Deep Green cabin to the lorry using lashing straps or you will damage the solar panels and skirt.